

Spot Moving Head			
CH	16ch		
1	Pan	0-255	0 - 540°
2	Pan fine	0-255	
3	Tilt	0-255	0 - 270°
4	Tilt fine	0-255	
5	X.Y speed	0-255	From fast to slow
6	LED Dimmer	0-255	From dark to bright
7	LED Strobe	0-7	Turn on
		8-250	Strobe from slow to fast
		251-255	Turn on
8	7 color + White	0-15	White Light
		16-31	Color1
		32-47	Color2
		48-63	Color3
		64-79	Color4
		80-95	Color5
		96-111	Color6
		112-127	Color7
		128-191	CW from slow to fast
192-255	CCW from slow to fast		
9	8 Static Gobos + White	0-6	OPEN
		7-13	Gobo1
		14-20	Gobo2
		21-27	Gobo3
		28-34	Gobo4
		35-41	Gobo5
		42-48	Gobo6
		49-55	Gobo7
		56-63	Gobo8
		63-70	Gobo 8 shake speed from slow to fast
		71-77	Gobo 7 shake speed from slow to fast
		78-84	Gobo 6 shake speed from slow to fast
		85-91	Gobo 5 shake speed from slow to fast
		92-98	Gobo 4 shake speed from slow to fast
		99-105	Gobo 3 shake speed from slow to fast
		106-112	Gobo 2 shake speed from slow to fast
		113-119	Gobo 1 shake speed from slow to fast
120-127	Open		
128-191	Gobo Rotate CW slow to fast		
192-255	Gobo Rotate CCW slow to Fast		
10	6 rotation gobos +White	0-15	OPEN
		16-31	Gobo1
		32-47	Gobo2
		48-63	Gobo3
		64-79	Gobo4
		80-95	Gobo5
		96-127	Gobo6
		128-191	Gobo Rotate CW slow to fast
		192-255	Gobo Rotate CCW slow to fast
11	Gobo Rotation	0-15	open
		16-95	Gobo Fine 0-360
		96-135	Gobo Rotating 0-90
		136-155	Gobo Rotating 0-180
		156-175	Gobo Rotating 0-720
		176-215	Gobo self-rotating CW from slow to fast
		216-255	Gobo self-rotating CCW rotating from slow to fast
12	Focus	0-255	
13	Prism	0-63	OPEN
		64-255	Prism in
14	Prism Rotation	0-15	Stop
		16-135	Rotate CW slow > fast
		136-255	Rotate CCW slow > fast
15	self-setting Program	0-7	No action
		8-131	Auto mode
		132-255	Sound mode
16	Reset	0-249	No function
		250-254	Reset
		254-255	No Function

Moving Wash	
CH	13ch
1	Pan
2	Tilt
3	Dimmer
4	Shutter closed
5	Red
6	Green
7	Blue
8	White
9	Zoom
10	3200k - 10000K
11	Static 1 - 23 / macro sound auto play
12	Focus auto 1 - 8
13	XY Auto run 1 - 8

LED Par COB	
CH	8ch
1	Dimmer
2	STROBE
3	×
4	×
5	RED
6	GREEN
7	BLUE
8	WHITE

CAM 3 ETZ

CAM3 ETZ	
CH	8ch
1	MASTER DIMMER
2	RED
3	GREEN
4	BLUE
5	WHITE
6	COLOR MARCOS & WHITE
7	STROBE
8	AUTO
9	AUTO SPEED

LED ZOOM	
CH	9ch
1	Dimmer
2	STROBE
3	×
4	×
5	RED
6	GREEN
7	BLUE
8	WHITE
9	ZOOM

LED Par (WarmWhite only)	
CH	3ch
1	Dimmer
2	STROBE
3	ZOOM

Neo CYC	
CH	18ch
1	MASTER DIMMER
2	MASTER DIMMER FINE
3	RED
4	RED FINE
5	GREEN
6	GREEN FINE
7	BLUE
8	BLUE FINE
9	AMBER
10	AMBER FINE
11	LIME
12	LIME FINE
13	COLOR MARCOS
14	STROBE
15	STATIC PIXEL
16	PIXEL EFFECT
17	AUTO SPEED ADJUSTMENT
18	DIMMER SPEED